Operating Instructions . . .

Models LES10AW and LGS10AW

Speed Queen

COMMERCIAL QUALITY DRYER
Automatic Dryness Control - 8 Cycles

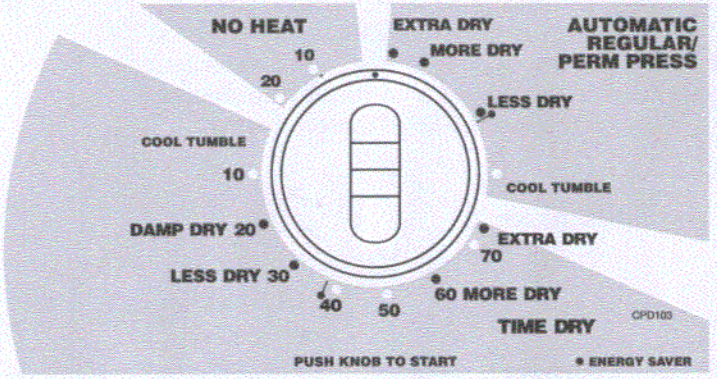

WARNING

To reduce the risk of fire, electric shock, serious injury or death to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your Use and Care Guide before operating the dryer.

W128

Available Drying Cycles

NOTE: Use the automatic cycle for drying items that can be dried with heat. This cycle automatically drys loads to the dryness level selected.

Automatic Regular/Perm Press Cycle

Use for sturdy items like play or work clothes, permanent press items and synthetics. There are three settings in the AUTOMATIC REGULAR/ PERM PRESS cycle — *EXTRA DRY, MORE DRY* and *LESS DRY*.

EXTRA DRY and *MORE DRY* will dry very small loads and some heavy items, such as blue jeans, but will **overdry** lightweight items, such as sheets and shirts. Overdrying can cause wrinkling, shrinking, excessive lint conditions, and will use more energy than necessary.

LESS DRY, which uses the least energy, will dry large loads and lightweight items, such as sheets and shirts, but might leave other items, such as denim and heavy bath towels, more damp.

To increase energy savings and to make sure loads are dried without overdrying, set your loads on *LESS DRY*. If items are damp at the end of a cycle, the timer knob needs to be set closer to the *MORE DRY* setting the next time these loads are dried. If items are still damp at *MORE DRY*, the timer knob should be moved closer to *EXTRA DRY*. If items are overdry at the end of a cycle, the timer knob should be set closer to *COOL TUMBLE* when these loads are dried again. Remember the settings that work best to get ideal drying results.

The *COOL TUMBLE* period at the end of each cycle provides items a chance to tumble with no heat and cool down to room temperature. This prevents wrinkles from setting if items cannot be removed from the dryer immediately.

The *ENERGY SAVER/DAMP DRY* settings, marked with a dot (•), show which settings will use the least energy and will leave items damp for easier ironing.

NOTE: The timer knob will not advance as quickly in the AUTOMATIC cycles as it does in the TIME DRY cycle. The time it takes for the timer to advance depends on the type and size of the load being dried.

Time Dry Cycle

This cycle will operate dryer for up to 75 minutes. Cottons and heavyweight items dry best between 50 and 75 minutes, and lightweight items dry best between 20 and 40 minutes.

No Heat Cycle

Use this cycle for up to 20 minutes of no heat drying.

© Copyright 1997, Raytheon Appliances

Part No. 504486
May 1997

To Dry Clothes

IMPORTANT: See the INSTALLATION INSTRUCTIONS before using dryer.

IMPORTANT: Before using dryer for the first time, use an all-purpose cleaner, or a detergent and water solution, and a damp cloth to remove shipping dust from inside of dryer drum.

1. Sort items into separate loads.

D305IE1A

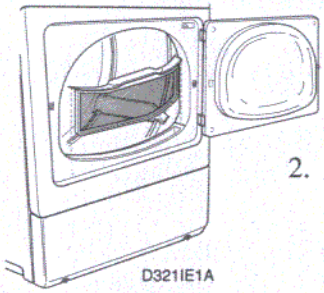

D321IE1A

2. Clean lint filter before each use.

3. Add clothes loosely into dryer drum. Add fabric softener sheet, if desired.

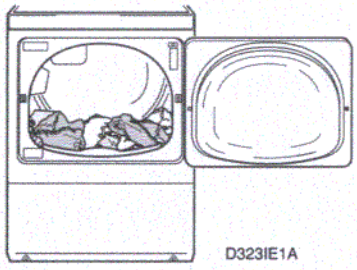

D323IE1A

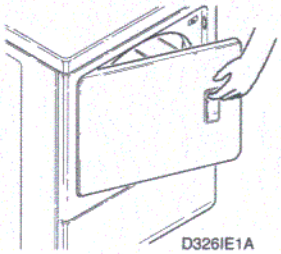

D326IE1A

4. Close loading door. Dryer will not operate with the door open.

5. Select timer setting in cycle desired: AUTOMATIC REGULAR/PERM PRESS, TIME DRY or NO HEAT. These cycles control the drying time.

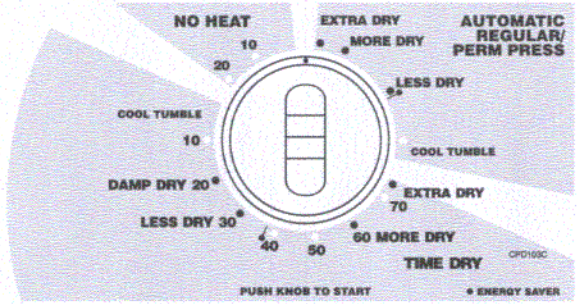

The *ENERGY SAVER/DAMP DRY* settings, marked with a dot (•), show which dryer settings will use the least energy and will leave items damp for easier ironing.Push timer knob in to start dryer.

6. Push timer knob in to start dryer.

NOTE: To stop dryer at any time, open door or turn timer knob to an OFF position. To restart dryer, close door, reset timer if necessary, and push the timer knob in.

Optional Equipment

A drying rack, Part No. DR-3, is available as optional equipment at extra cost. The rack can be used for no-tumble drying of articles, such as tennis shoes, sweaters, stuffed toys or other delicate items.

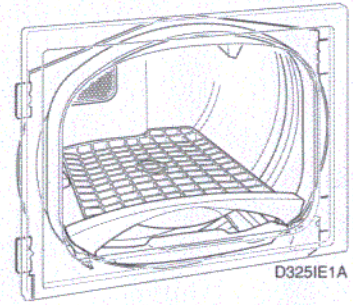

D325IE1A